



**JIANG DONG**

## Engine Won't Start

The reasons for a “won't start problem” can be caused by a wide variety of individual or combinations of concurrent problems and the best place to begin is to do a quick check of the engine:

- Is the tank full of fresh gasoline?
- Does the air filter need to be cleaned or replaced?
- Check the condition of the spark plug.
- Is the fuel valve turned on?
- Is the On/Off switch turned ON?
- Is the choke in the correct position or the primer functioning?
- Check the oil for correct fill level and quality. \*(see note below)

If the problem isn't located or resolved during the quick check procedure, you'll need to check for the following problems:

- No ignition spark
- Improper timing
- Fuel mixture not reaching the combustion chamber
- Abnormally low compression
- Engine not turning fast enough to start

Suggested troubleshooting order: FUEL - IGNITION - TIMING - COMPRESSION

### **\*Note:**

The oil level should not be a factor unless the engine is equipped with a low oil shutoff system, but should always be checked prior to use.

